


ProFloSE Downflow 5000SE

Valve Power head Assembly Parts List

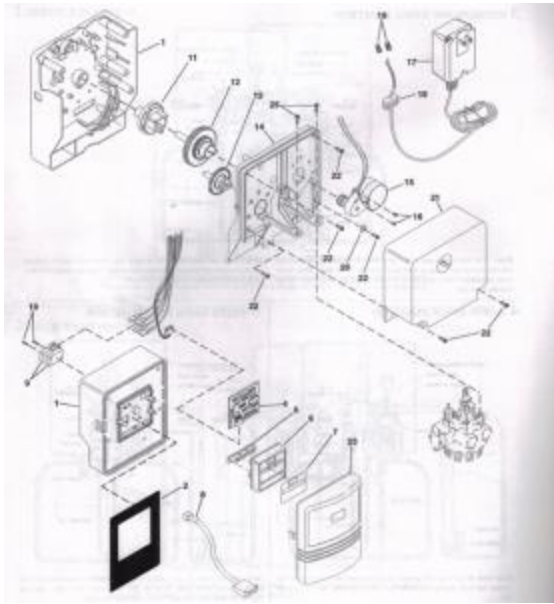

ProFloSE Downflow

Valve Power Assembly Parts List

Item No	Quantity	Part No	Description
1.....	1	40269.....	Plate, Front
2.....	1	40326.....	Label, Cover-up
3.....	1	19474.....	Harness, Power
4.....	1.....	40283.....	Circuit Board, SE Timer
5.....	1	40376.....	Button, Conductive
6.....	1	19471-02	Cover, Front Panel
7.....	1.....	19697-01	Label, Display
8.....	1	19791-01	Meter Cable Assy., Turbine
9.....	2	10218	Switch, Micro
10	2	17876	Screw #4-40×1.125
11.....	1	19927.....	Cam, Switch Downflow
12	1	18211-01	Gear, Main Downflow

131 18228 Cam, Brine, Downflow
 14118202-03Back Plate
 15140251.....Motor Assy., 24V 50/60Hz
 162 13602 Screw, Rd. Hd. 6-33 x 5/16
 17119674.....Transformer U.S. 24V (120V) 50/60HZ
 1 25651 Transformer European 24V (230V)
 18113547.....Strain Relief
 194 12681 Nut, Wire, Beige
 201..... 13363 Washer, Plain, .145 I.D.
 21118259-02Cover, Back Black
 226 13296 Screw, Hex Washer 6-20 x 1/2
 231.....18260-00Cover, Front Smoke
 24218261.....Screw,HexHead,10-24x13/16
 Not Shown1.....14044.....Cable Tie

U.S.A.